

RENAULT

6 Sealing and soundproofing

65A OPENING ELEMENT SEALING

66A WINDOW SEALING

68A SOUNDPROOFING

X84, and B84 or C84 or G84 or S84

77 11 318 162

AUGUST 2004

Edition Anglaise

"The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The methods may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which his vehicles are constructed."

All copyrights reserved by Renault.

The reproduction or translation in part or whole of the present document, as well as the use of the spare parts reference numbering system, are prohibited without the prior written consent of Renault.

Mégane II - Section 6

Contents

	Page
65A OPENING ELEMENT SEALING	
Front side door frame seal: Removal - Refitting	65A-1
Rear side door frame seal: Removal - Refitting	65A-2
Sunroof seal: Replacement	65A-4
66A WINDOW SEALING	
Front door side exterior weather strip: Removal - Refitting	66A-1
Rear side door exterior weather strip: Removal - Refitting	66A-2
68A SOUNDPROOFING	
Bonnet soundproofing: Removal - Refitting	68A-1

OPENING ELEMENT SEALING

Front side door frame seal: Removal - Refitting

65A

B84 or C84 or S84


Special tooling required

Car. 1363


Trim removal lever

REMOVAL

- Remove the door mirror (see 56A, Exterior accessories, Door mirror).

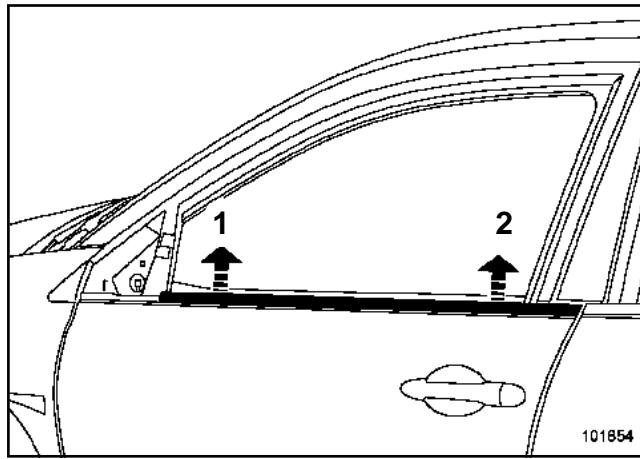


- Carefully remove the weatherstrip in the direction of (1) and (2) using tool (Car. 1363).

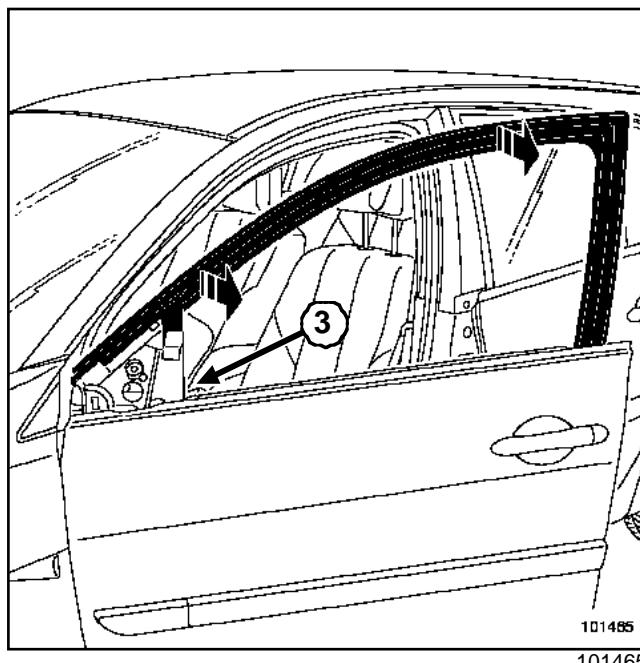

- Remove seat runner seal (3).
- Carefully unclip the door frame seal.

REFITTING

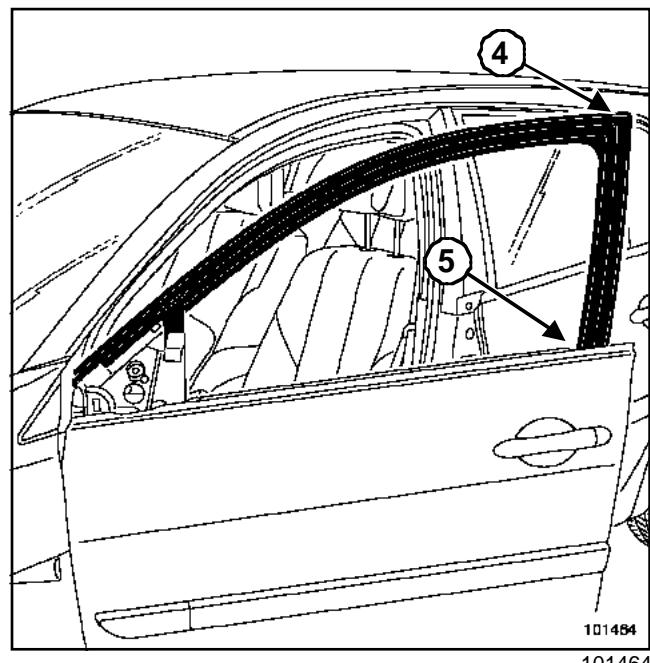

- Position the seal.
- Fit corner seal (4), taking care to slide it behind panel (5).
- Proceed in the reverse order to removal.

B84


Special tooling required

Car. 1363


Trim removal lever

REMOVAL


- Remove the door trim (see 72A, Side opening element trims, Front door trim).

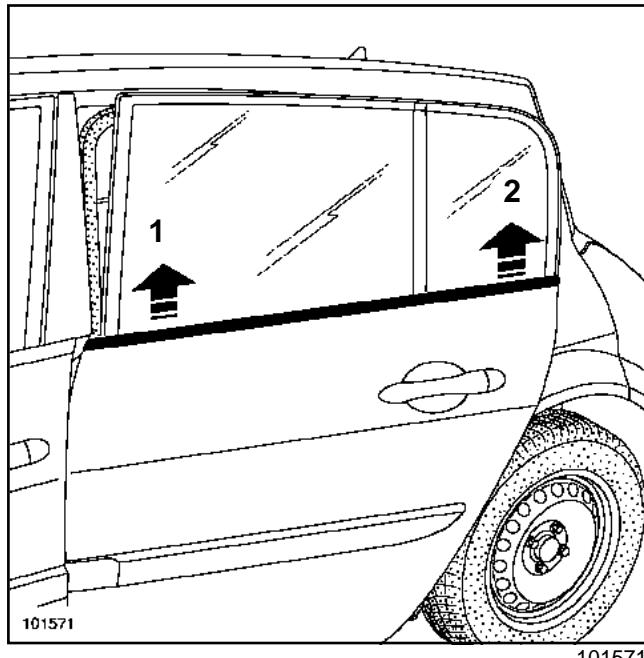

- Unclip the exterior weatherstrip in the direction of (1) and (2) using tool (Car. 1363).

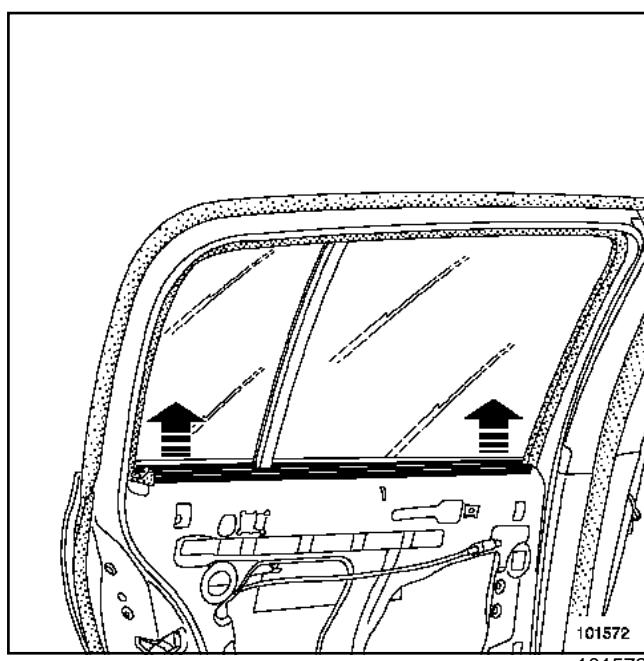


- Remove the interior weatherstrip.

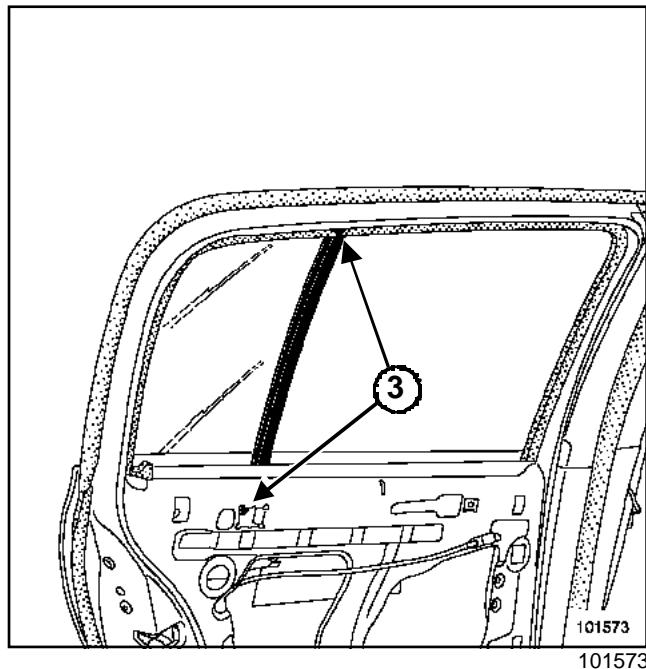

- Remove:

- bolts (3),
- the fixed upright channel.

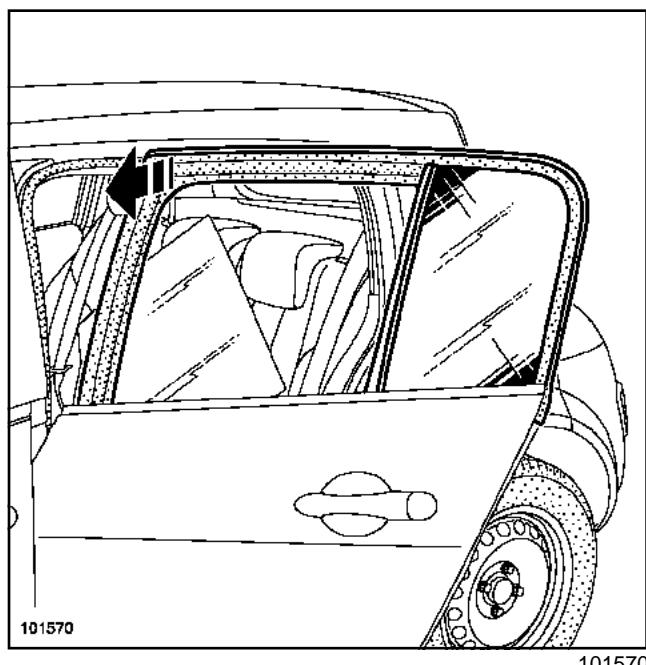

- Unclip the front section of the seal.


OPENING ELEMENT SEALING

Rear side door frame seal: Removal - Refitting


65A

B84


REFITTING

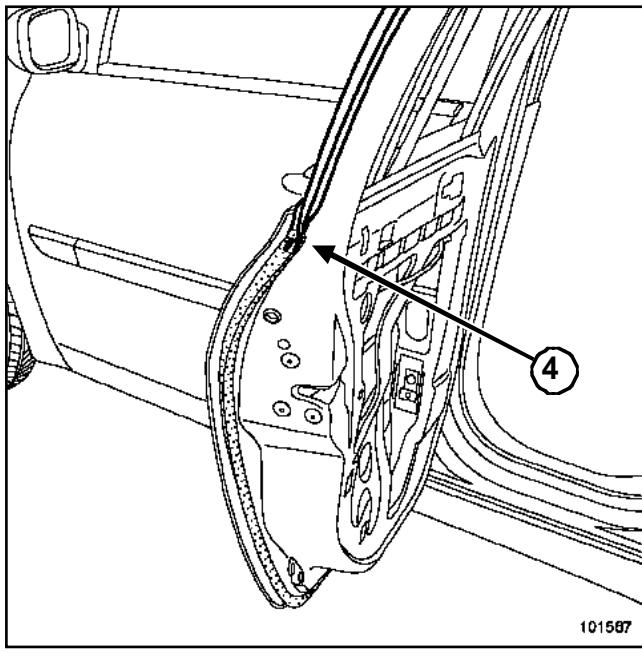


- Unclip the upper clip from double seal (4).

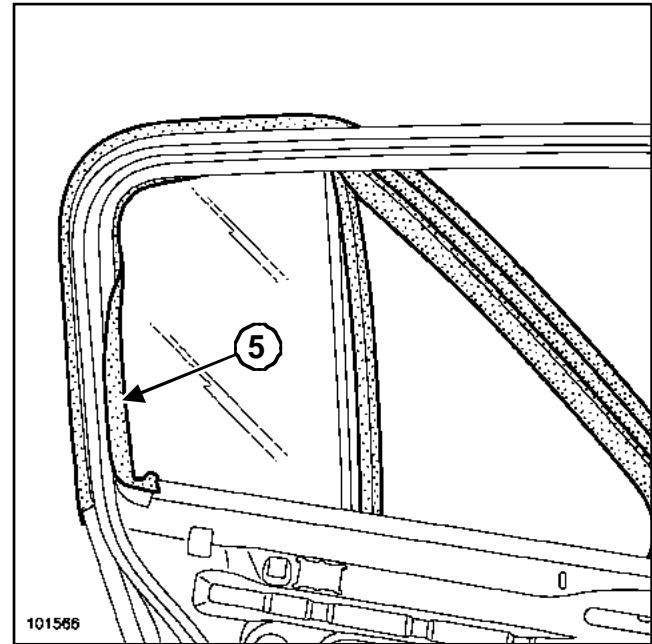

- Offer up the « seal and fixed window » to the door.
- Clip in interior surface seal (5).

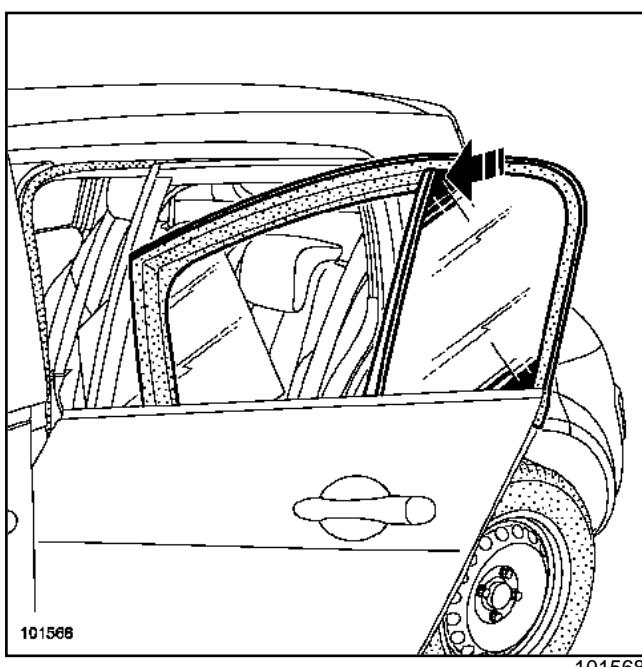

- Remove the « seal and fixed window » assembly from the door.

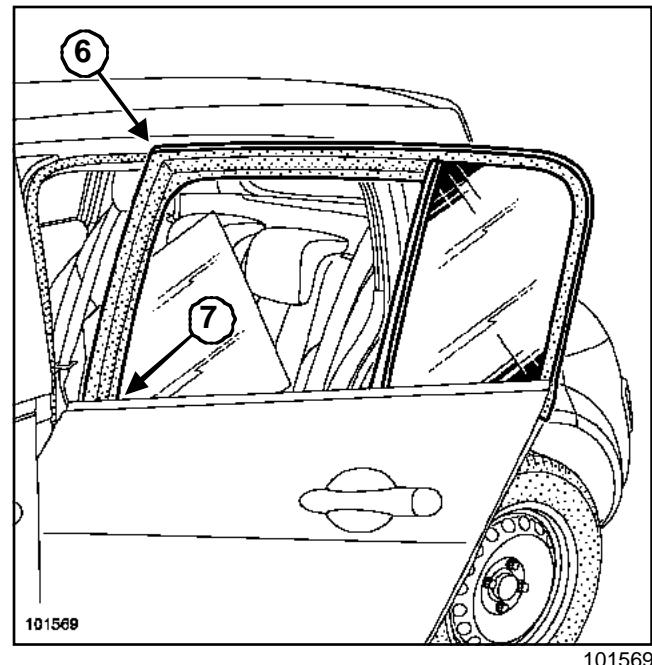

- Position corner seal (6).
- Fit corner seal (6), taking care to slide it behind panel (7)
- Proceed in the reverse order to removal.

OPENING ELEMENT SEALING



Sunroof seal: Replacement

65A

B84 or C84

REPLACEMENT

- Remove the mobile panel from the sunroof (see **52A, Non-side opening element mechanisms, Sunroof mobile panel: Removal - Refitting**).

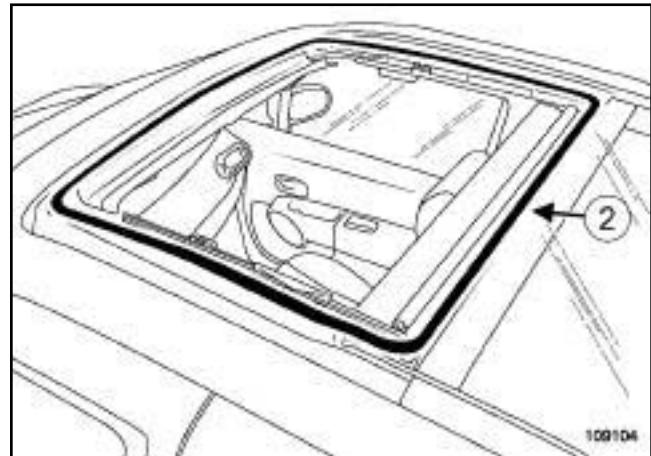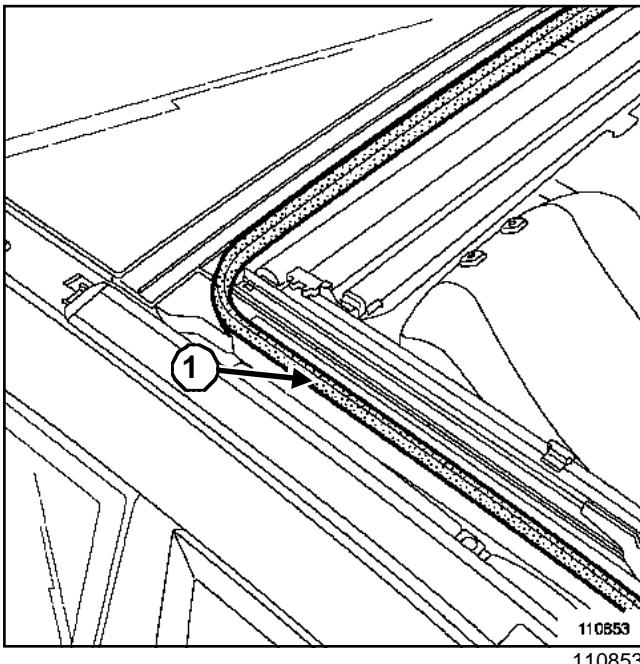

- Position the seal weld on the rear centre section (2).
Bond the seal using adhesive, Part No.: **77 11 223 369**.
- Refit the mobile panel to the sunroof (see **52A, Non-side opening element mechanisms, Sunroof mobile panel: Removal - Refitting**).
Initialise the sunroof motor (see **MR 371 87D, Electric windows - Sunroof, Initialisation**).

□

WARNING

Replace the seal (1) after each removal.

- Clean and then degrease the bonding area with heptane.

WINDOW SEALING

Front door side exterior weather strip: Removal - Refitting

66A


B84 or C84 or S84

Special tooling required


Car. 1363

Trim removal lever


REMOVAL

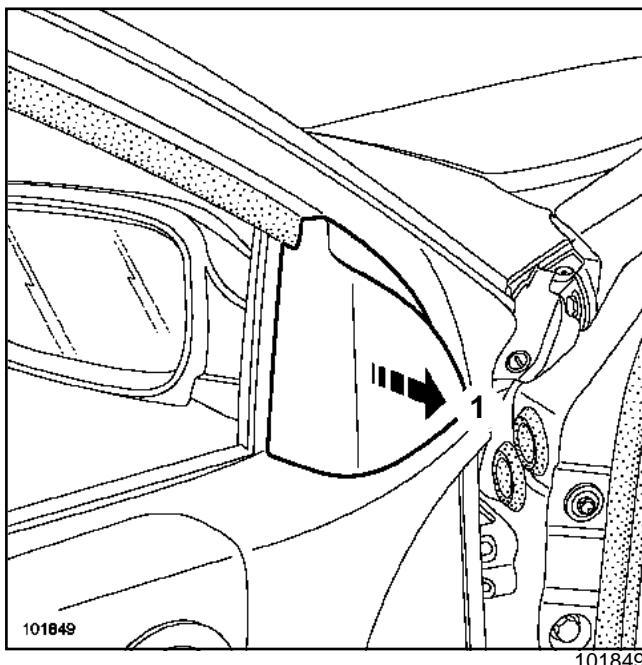

- Remove interior trim (1).

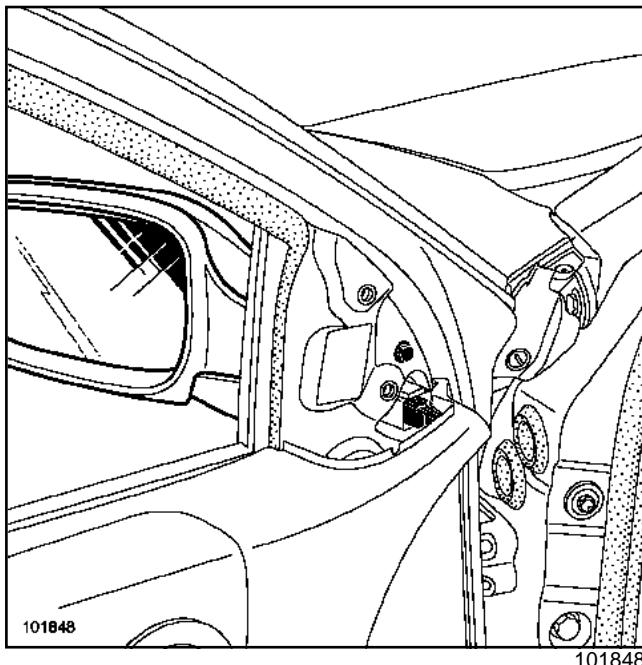

- Remove the door mirror retaining bolt.
- Disconnect the connector.
- Remove the door mirror.

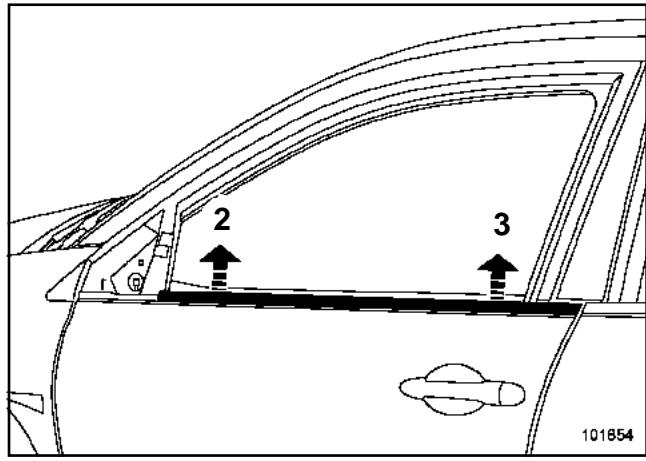

- Carefully remove the weatherstrip in the direction of (2) and (3) using tool (Car. 1363).

REFITTING

- Proceed in the reverse order to removal.

WINDOW SEALING

Rear side door exterior weather strip: Removal - Refitting

66A


B84 or S84

Special tooling required

Car. 1363

Trim removal lever

REMOVAL

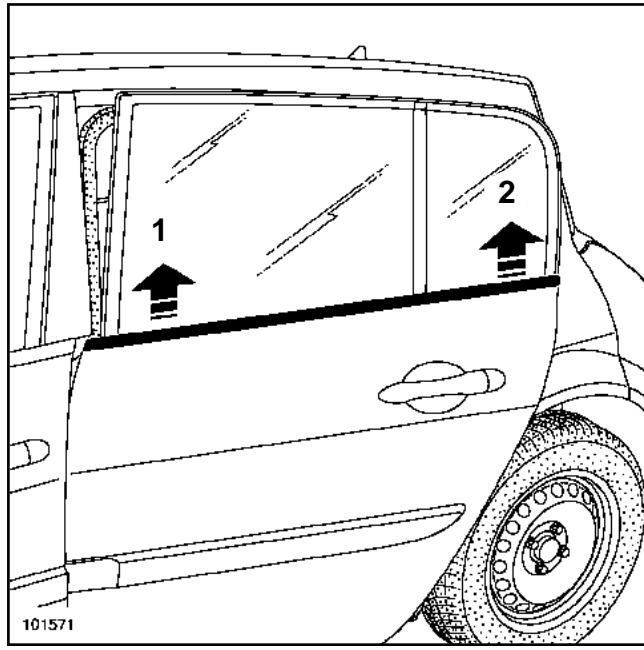

101571

- Carefully remove the weatherstrip in the direction of (1) and (2) using tool (**Car. 1363**).


WARNING

The fixed window holds in the weatherstrip.

- Position the weatherstrip on fixed window (2).
- Clip on the weatherstrip.

B84 or C84

REMOVAL

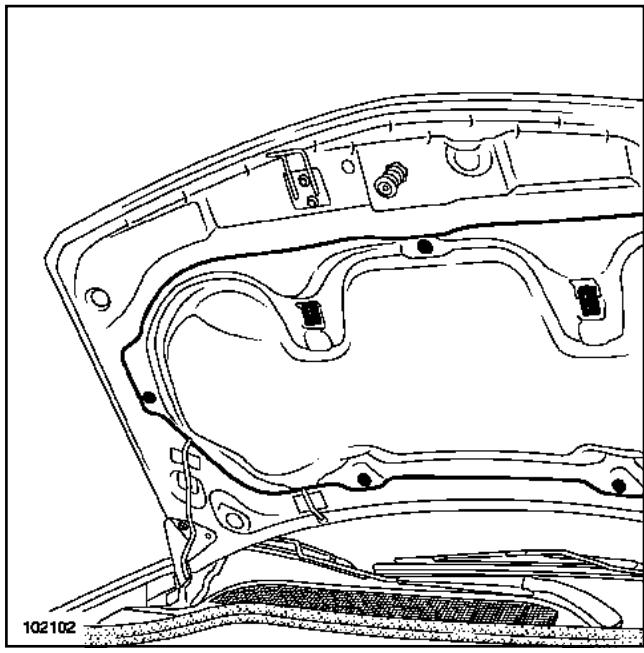

- Unclip the five clips using a pair of unclipping pliers.
- Release the bonnet soundproofing material downwards.

REFITTING

- Replace the clips if necessary.
- To refit, proceed in the reverse order of removal.